



EH1414

Evaporative Air cooler



Evaporative Air cooler
Air purifier
Humidifier
4 litre water tank

IMPORTANT

Installer and Users please note:

These instructions should be read carefully and left with the user of the product for future reference.

BEFORE USE

You must inspect the product including its cable and plug for any signs of damage. If the product is damaged, DO NOT use it, and contact your supplier immediately.

PRODUCT SAFETY

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Place the EH1414 on a firm flat surface. Ensure that the air outlet is not obstructed.
- Do not place on soft surfaces.
- Do not move the appliance whilst it is operating.
- For indoor use only.
- Do not use in bathrooms, or in wet or damp locations.
- Do not place the mains lead beneath a carpet or rug.
- Do not clean the water tank with detergents or bleach
- Do not place the appliance in direct sunlight, or close to a source of heat.
- Do not leave water in the tank if the appliance is not in use (this encourages the growth of bacteria)
- Do not allow the appliance to tip over whilst there is water in the tank.

OPERATION

To fill the water tank:

Pull open the water tank drawer (it does not come all the way out) and fill with clean cold water until the water level reaches the MAX level visible at the front of the appliance. Then close the drawer.

To operate:

Plug the mains lead into a 13 Amp mains socket.

If connecting via an extension lead, make sure that the lead is rated at 3 Amps or more, and that it is fully unwound.

Select the airflow speed by pressing either the **LO**, **MI** or **HI** buttons (for low, medium, or high airflow)

The **OSC.** button controls the oscillation of the louvers.

The **COOL** button controls the cooling and humidification of the air.

The water level is visible through the indicator window on the front panel. When the water level reaches MIN fill the tank as above.

Timer: To use the timer, rotate the timer dial so that it indicates the number of minutes for which the appliance is required to run.

After the selected number of minutes the appliance will switch off.

OPERATING COSTS

At time of going to press, the average cost of electricity is £0.11 per unit (kilowatt-hour). The amount you are being charged will be shown on your electricity bill.

At this cost, the EH1414 will cost 18p per day to run,

MAINTENANCE

Clean the outside of the appliance with a soft damp cloth, with a drop of washing-up liquid.


Clean the filter every 20 to 30 days of use - remove the filter cover from the rear panel and remove the filter. Wash the filter in hand-hot water to which a drop of washing-up liquid has been added. When thoroughly dry, replace the filter in the appliance. Replace the filter every year.

If the mains lead is damaged, it must be replaced by the manufacturer or and authorised service centre. If the mains plug needs to be replaced,

proceed as follows:

- Connect the brown wire to the terminal labelled "L".
- Connect the blue wire to the terminal labelled "N".
- Make sure that the cord-grip is positioned correctly (over the outer sheath of the cable) and it fully tightened.

If the plug is supplied with a 13A fuse, replace it with a 3A fuse.

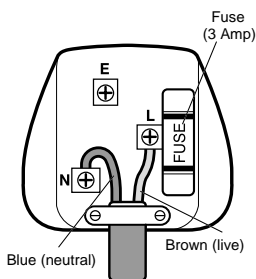

PAT TESTING.

When used in a workplace, this product must be safety-tested yearly by a qualified electrician (PAT Tested) in order to comply with the Electricity at Work Regulations.

We recommend that it is PAT tested regularly when used in a domestic environment.

GENERAL SAFETY REQUIREMENTS

Domestic wiring must be tested periodically by a qualified electrician at least once every 10 years or at every change of occupancy.

For office and retail premises, and buildings such as village halls, the wiring must be inspected at least once every 5 years.

It is recommended that all buildings be fitted with smoke alarms (it is mandatory for new buildings).

DISPOSAL AND RECYCLING

You must not dispose of this appliance with domestic household waste.

Most local authorities have specific collection system for appliances and disposal is free of charge to the end-user.

When replacing an existing appliance with a similar new appliance your retailer may take the old appliance for disposal.

TECHNICAL SPECIFICATION

Dimensions:	292x232x670 mm
Weight:	6 kg
Power supply:	230 V ~
Power consumption:	70 W
Operating current:	300 mA
Air flow:	300 m ³ /h

SERVICE WARRANTY

Prem-i-Air guarantees the product free from defects in materials and workmanship for a period of two years.

Should this appliance be operated under conditions other than those recommended, at voltages other than the voltage indicated on the appliance, or any attempts made to service or modify the appliance, then the warranty will be rendered void.

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

If you have any problems with this product, please call our Help Desk on (0845) 459 4816.

Prem-i-Air Appliances Ltd.,
Lancots Lane, Sutton,
St. Helens, Merseyside.
WA9 3EX

website: www.prem-i-air.co.uk